Warning

- 1. This appliance is for outdoor use only, and shall NOT be used in a building, garage or any other enclosed area.
- 2. Do NOT use this fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- 3. This fire pit is NOT for commercial use.
- 4. This fire pit is NOT to be operated by children.
- 5. This fire pit is NOT to be used in or on boats or recreational vehicles.
- 6. Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
- 7. When using this fire pit, exercise the same precautions you would with any open fire.
- 8. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to safely operate this fire pit.
- 9. This fire pit is for use with dry, seasonal hardwood. It will burn hotter, more completely and create less smoke.
- 10. Do NOT burn charcoal briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
- 11. Do NOT alter this fire pit in any manner.
- 12. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this fire pit.
- 13. Do NOT store or use an LP gas cylinder within 10 feet (3.05m) of this fire pit while it is in operation.
- 14. Do NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
- 15. Do NOT use in an explosive atmosphere. Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
- 16. Do NOT use this fire pit under any overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
- 17. Always use this fire pit on a hard, level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
- 18. Always empty this fire pit before each use.
- 19. Do NOT wear flammable or loose clothing when operating this fire pit.
- 20. Do NOT use in windy conditions.
- 21. Do NOT use gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light or relight fires.
- 22. Keep all electrical cords away from a hot fire pit.
- 23. All surfaces of this fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (Potholders, gloves, BBQ mittens, hot pads & etc.). Never touch ashes or coals to see if they are hot.
- 24. Do NOT leave a lit fire pit unattended, especially around children and pets.
- 25. Do NOT attempt to move or store this fire pit until all ashes and coals are completely extinguished.
- 26. Do NOT remove ashes or coals until they are completely and fully extinguished.
- 27. Use long, sturdy fire pit tools when adding or moving logs.
- 28. Do NOT overload the fire pit. Do not add additional firewood until the fire burns down.
- 29. Do NOT lean over this fire pit when lighting or when in use.
- 30. Avoid breathing smoke from the fire and avoid getting it into your eyes.
- 31. This fire pit should be thoroughly inspected and cleaned on a regular basis.
- 32. After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and/or cleanup are executed.
- 33. Deaths, serious injury or damage to property may occur if the above is not followed exactly.